Polaroid

# FUN! 620

## *Digital Camera*

數位相機

## *User's Manual*

使用手冊

**WARNING:** Turn your camera and computer OFF before connecting them using the SERIAL cable. If you don't, you may damage them.

**警告：**使用**序列**纜線前，請先將相機與電腦**關閉**。如果您不這樣做，您可能會同時損害兩者。

# The Polaroid *FUN* 620 Creative Kit

Your Polaroid *FUN* 620 Digital Camera Creative Kit contains everything necessary to take digital photos, save them to your computer, and manipulate them.

**Caution:** *Before connecting the camera to your computer, install the PhotoImpression 2 software included with the camera (page 8), and restart your computer.*

The kit includes:

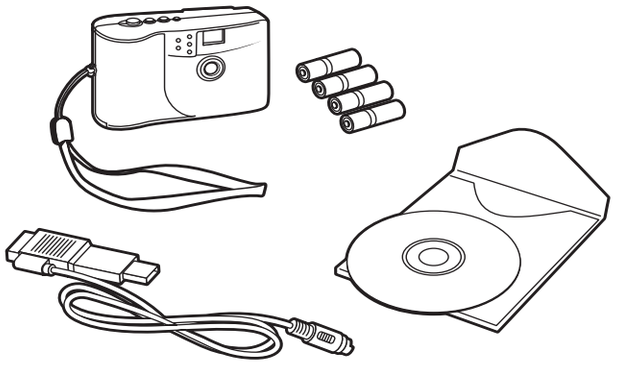

- Polaroid *FUN* 620 Digital Camera
- Four AAA batteries
- Camera-to-computer cable (with both RS-232C Serial and USB plugs)
- Polaroid PhotoImpression 2 Software CD-ROM

**Note:** Ensure that your computer has an RS-232C Serial port or a high-speed USB port (Windows 98, Me, or 2000 only).

# Camera front

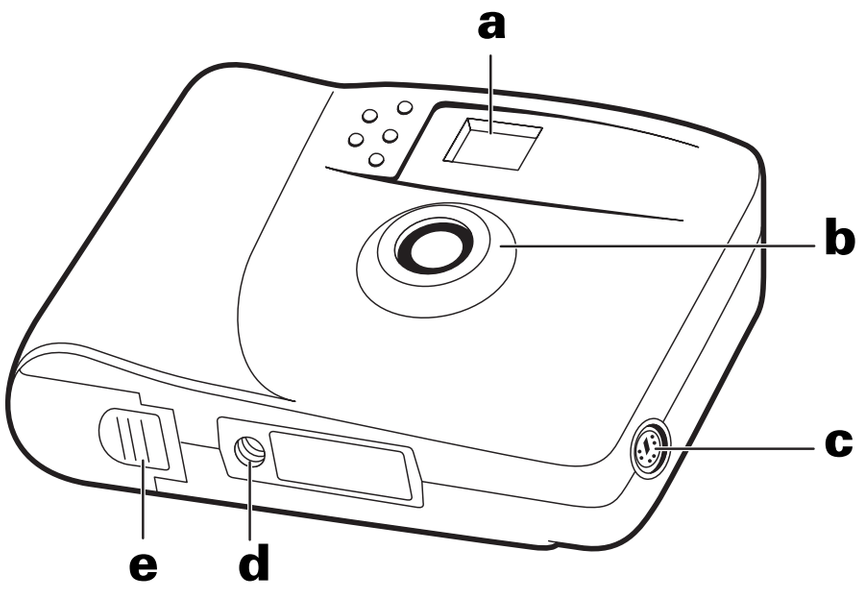


- **a** Viewfinder
- **b** Lens
- **c** Serial/USB cable connector port
- **d** Tripod mount
- **e** Battery compartment

# Camera rear

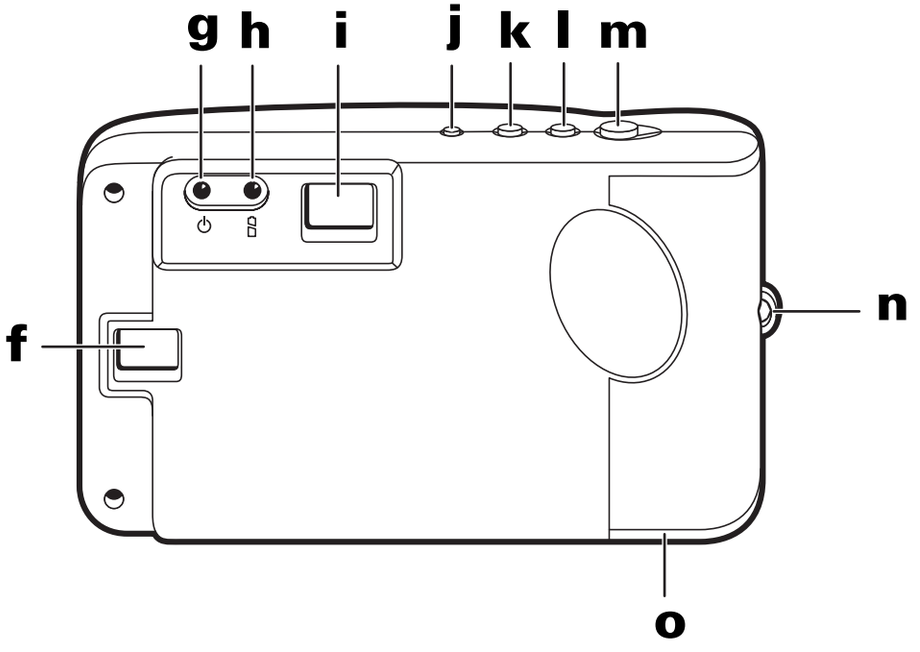


- **f** LCD status display
- **g** Power/status indicator
- **h** Low-battery indicator
- **i** Viewfinder
- **j** Power button
- **k** Photo erase button
- **l** Self-timer button
- **m** Shutter button
- **n** Wrist strap slot
- **o** Battery compartment

**Note:** For more information about your camera, see the **Tips, Tricks, Terms, and Techniques** section of the *PhotoImpression 2 Online User's Guide* (the software online Help).

# Turning the Camera On and Off

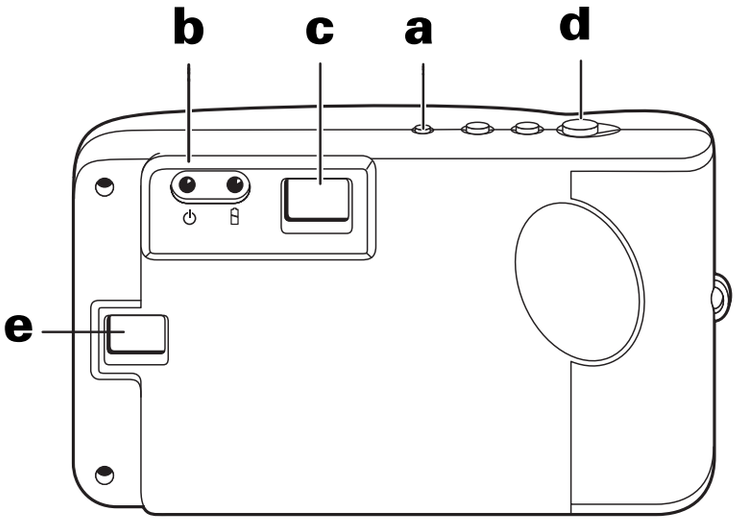


**1** Turn the camera on (**a**). You hear a click, the LCD (**e**) turns on, and the green power/status indicator (**b**) is lit.

If the green power/status indicator is not lit, check that the batteries are properly loaded and fully charged.

**2** To turn the camera off, press and hold the power button (**a**) until the green power/status indicator (**b**) turns off.

**Note:** To conserve battery power, the camera beeps and shuts off after 90 seconds of inactivity. To turn it on, press the power button (**a**). The LCD (**e**) turns on and the power/status indicator (**b**) is lit. To take a photo, look through the viewfinder (**c**) and press the shutter button (**d**).

# Inserting Batteries

Your kit includes four AAA batteries.

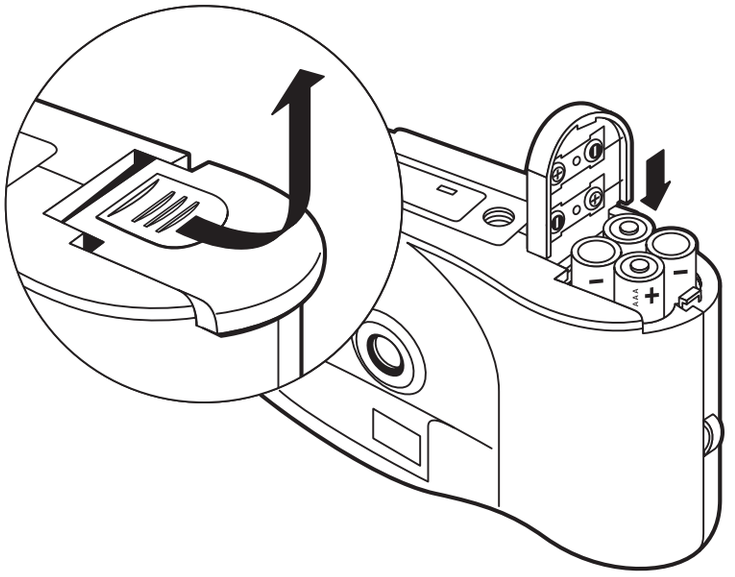

1. Turn the camera off.
2. Open the battery door by sliding the cover out to the side as far as it will go and lifting it.
3. Insert the batteries. Ensure that the battery terminals (**+** and **-**) are properly positioned (as shown).
4. Close the battery door securely. Slide it out to the side as far as it will go, press it against the camera base, and slide it back into the base to lock it closed. If you feel resistance, do not force the door closed.

**Note:** Replace the batteries when the low-battery indicator (**a**) turns on, the LCD shows **bL**, or the LCD does not turn on.

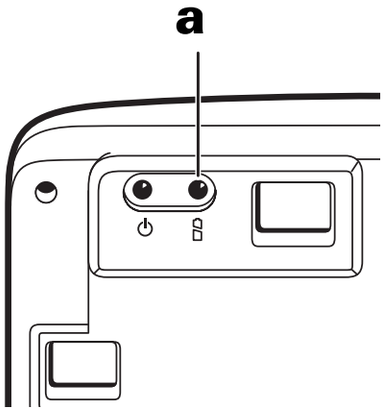


Do not mix old and new batteries, batteries of different types, or batteries from different manufacturers. High-capacity super-alkaline batteries provide longer battery life for digital cameras.

# Taking Photos

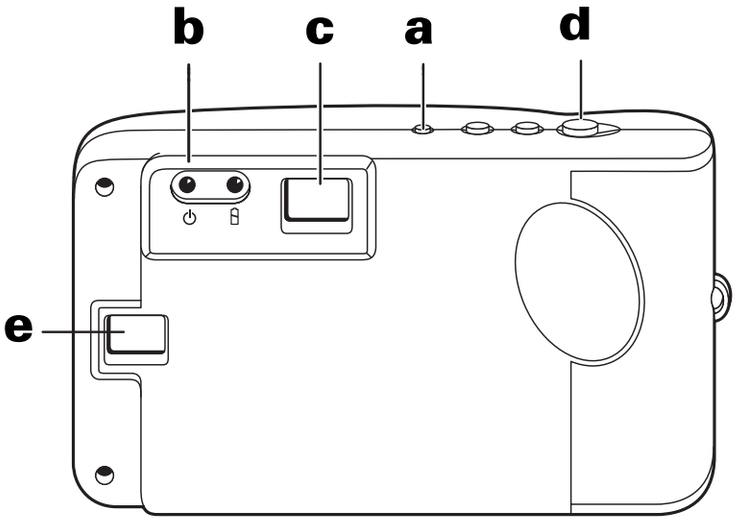


1. Turn the camera on (**a**). The green power/status indicator (**b**) is lit.
2. Stand at least 1 m (3 feet) from your subject.

**Note:** For best results, take photos outdoors or indoors in a brightly lit room.

3. Point the camera toward your subject. If you see the low-light warning message (**LL**) on the LCD (**e**), add light or move to a brighter location.

   If you still want to take a low-light photo without adding light or moving to a brighter location, hold the camera very steady or attach it to a tripod (using the tripod mount), due to the increased exposure time required. Under low light conditions, photo quality may be reduced.

4. Frame your subject within the yellow lines in the viewfinder (**c**).
5. Hold the camera steady and press the shutter button (**d**) until the camera beeps. (Moving the camera before you hear the beeps may blur the photo.) The power/status indicator blinks while the photo is processed, and the picture counter in the LCD (**e**) increases by one.

**Note:** When the 1 MB camera memory is full (about 15 photos), the LCD shows the memory-full message (**FL**) and the camera issues three quick warning beeps. If you press the shutter button, the camera beeps three times, but does not take a photo.

**Note:** When the memory is full, transfer photos to your computer (page 9) and erase them from the camera's memory (page 7 and page 13).

# Using the Self-timer

Use a tripod or place the camera on a flat surface when using the self-timer.

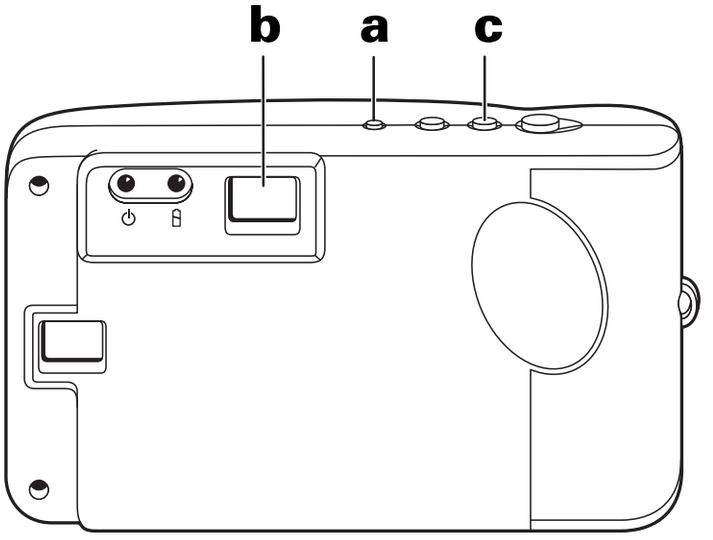


1. Turn the camera on (**a**).
2. Set the camera into position to take a photo.
3. Compose the photo in the viewfinder (**b**).
4. Press the self-timer button (**c**). The camera beeps for fifteen seconds, the beep speeds up and then stops just before the camera takes the photo.

   To cancel the self-timer, press the power button.

**Note:** Do not press the shutter button when using the self-timer.

# Erasing photos From the Camera

**1** Press and hold the photo erase button (**a**) for 3 seconds. The last photo taken is erased.

You hear a beep when the photo is erased, and the photo count on the LCD (**b**) decreases by one.

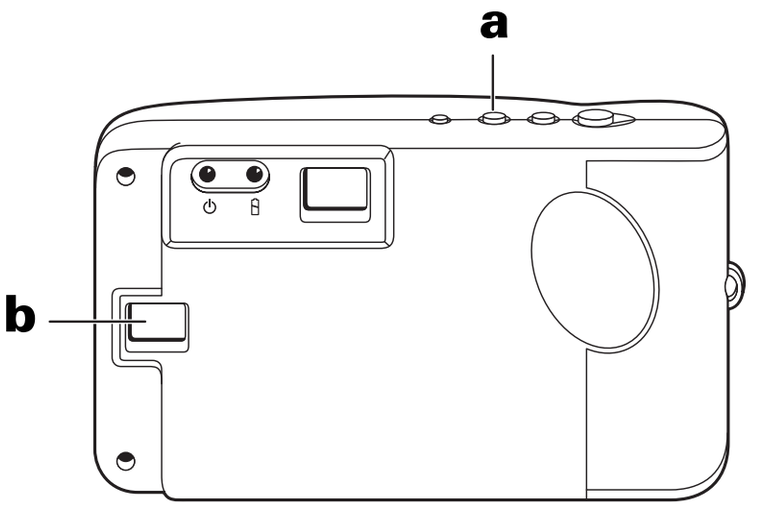


**2** Repeat to erase additional photos.

**Note:** You can also erase photos using the Polaroid PhotoImpression 2 Software (page 13).

**Warning: Once you erase a photo, it is gone forever.**

# Installing PhotoImpression 2 Software

**1** Turn your computer on.

**2** Check that the computer meets these requirements:

- 200 MHz Pentium processor or equivalent
- Compatible with Microsoft Windows 95, 98, Me, or 2000
- 32 MB RAM and 195 MB available hard disk space
- Available USB port (Windows 98, Me, or 2000) or RS-232 Serial port
- High-color display with 800 x 600 DPI resolution or higher
- 2x or faster CD-ROM drive
- Mouse

**3** Insert the software CD in your PC.

If the installation program does not start automatically:

**a** Select **Run** from the Windows **Start** menu.
**b** Click **Browse** and select your CD-ROM drive.
**c** Select **Setup.exe** from the CD-ROM.
**d** Click **Open**.
**e** Click **OK**. The installation program begins.

**4** Follow the instructions on your computer screen.

**5** Click **Finish**.

**Caution:** *You must restart your computer after installing the software.*

# Transferring Photos to Your Computer

**1** Turn the camera off.

**2** Turn your computer and peripherals off (Serial transfers only).

Do not turn your computer off when using the computer's USB port.

**3** Locate the connector cable. It includes plugs to connect to the camera and to your computer's Serial or USB port (as shown).

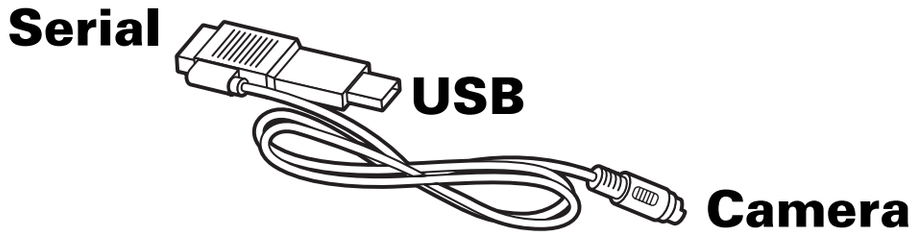


**Note:** USB transfer rates are faster than Serial.

**4** Connect the Serial plug (**a**) or the USB plug (**b**) to your computer.

**Caution:** *If the USB connection is not tight, the plug may pull out. Check that it is fully inserted every time you transfer photos.*

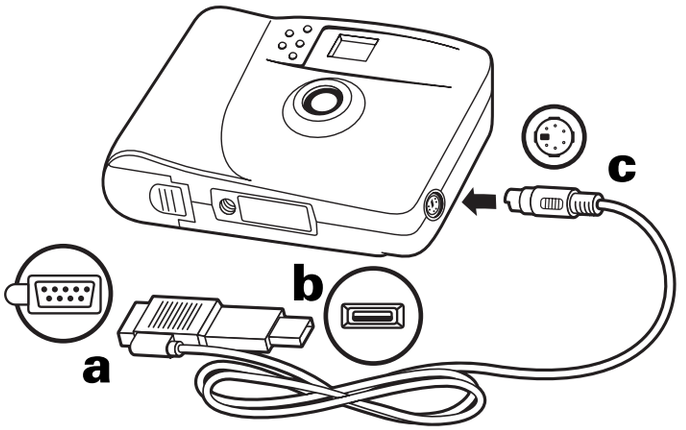


**Note:** For help with the Serial or USB port on your computer, read the computer's instruction manual or contact the computer manufacturer.

**5** Insert the other end of the cable (**c**) straight into the camera without twisting (and with the arrow on the plug facing the **front** of the camera). If you feel resistance, do not force the plug; reposition it and try again.

**6** Turn the computer on (Serial transfers only).

**7** Open the PhotoImpression 2 software by double-clicking the **PhotoImpression 2** icon on your Desktop. The **Get Photo** button is selected.

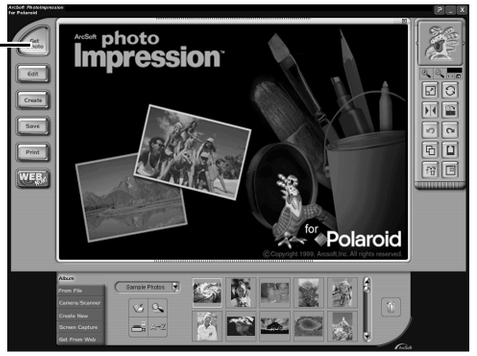


The **Get Photo** button lets you acquire photos from several sources:

| Selection: | Used To: |
|---|---|
| **Album** | Open a photo in a PhotoImpression 2 album |
| **From File** | Open a recently used photo or any photo stored on your computer |
| **Camera/Scanner** | Transfer a photo from your camera, scanner, or other TWAIN-compatible device |
| **Create New** | Create a new image file |
| **Screen Capture** | Grab an entire computer screen or active window |
| **Get From Web** | Get a photo from your albums on the **www.PolaroidDigitalASIA.com** Web site |

**8** Click **Camera/Scanner**.

**9** Select **Polaroid FUN 620** in the **Select Source** list.

**10** Choose a location on your computer for storing your photos.

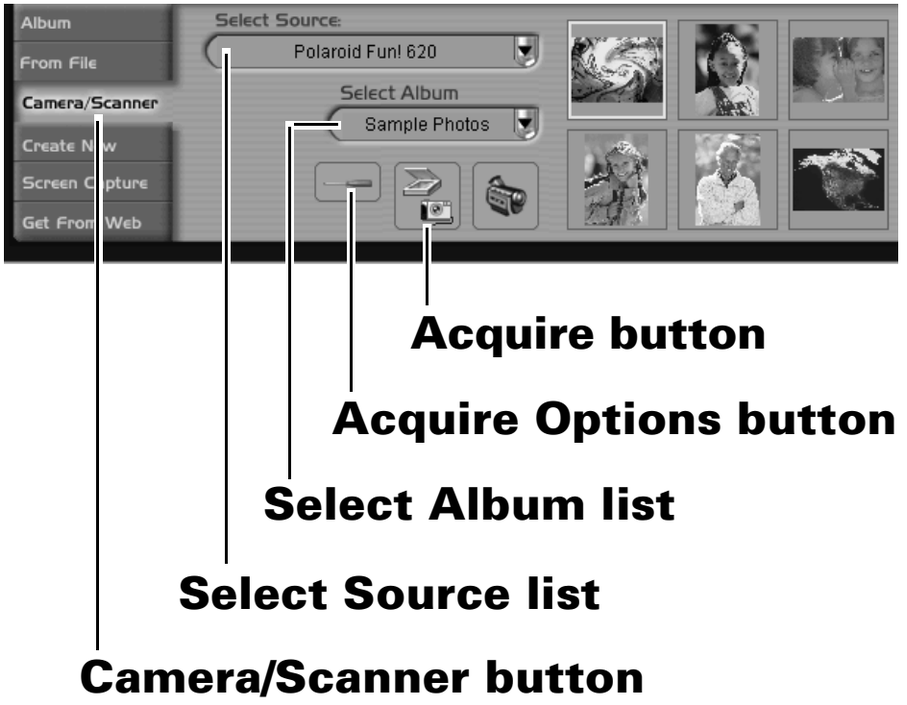


There are two ways to choose a location:

- The fastest way to save, display, and manipulate your photos is to select an album in the **Select Album** list. To create a new album, select **[New]** and use the album **NewAlbum1** or type a different album name.

  **Note:** Your photos appear in the active photo album and the photo files are stored in **c:\My Documents\My Pictures**. The files are named using the date you downloaded them. For example: **Mar30$01.JPG**

- If you want to customize where and how your photos are stored, click the **Acquire Options** button.

A **TWAIN Options** window opens, which lets you select the file format, the folder where photos are stored, and file names for photos. Click **OK** when finished.

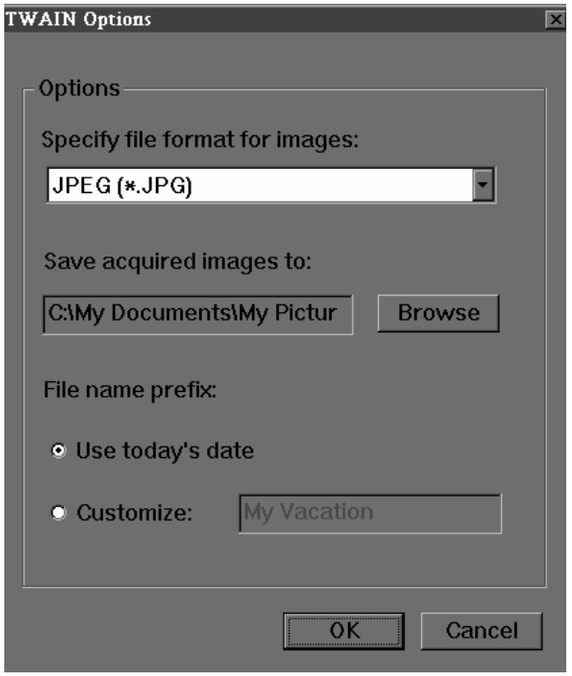


**11** Turn the camera on.

**12** Click the **Acquire** button.

The TWAIN software opens. TWAIN software is used to transfer and delete photos from your camera.

**Note:** If you see a failed connection message or warning window, turn the camera off and on again, check the connections between the camera and computer, and click **Acquire**.

**13** Click **Refresh Thumbnails** if your photos do not appear automatically in the TWAIN window.

**14** Select photos to transfer to your computer:

- To select a single photo, click on the photo thumbnail. A red border appears around the photo.
- To select more that one photo, press **Control** (**Ctrl**) on your keyboard while you click on each thumbnail photo. Red borders appear around selected thumbnails.
- To select all photos, click **Select All**. Red borders appear around all thumbnails in the camera.

**15** Click **Get Photos**.

**Caution:** *To avoid losing your photos, copy them to removable storage, such as a floppy disk, Zip disk, or writable CD.*

**16** To open a photo stored using the **Select Album** list (in step 10), double-click the thumbnail image that is displayed in the on-screen photo album. The photo appears in the image tray.

To open a photo stored using the **TWAIN Options** window (in step 10), use the **Get Photos**, **From File**, and **Browse** buttons to find the photo and display it in the image tray.

You can now manipulate the image using the PhotoImpression 2 tools.

**Note:** To erase all photos from the camera, click **Delete All Photos**. Once you delete the photos, they are gone forever.

# Getting Help with PhotoImpression 2 software

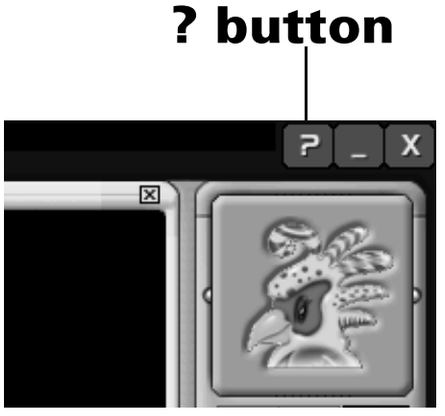


- Select the **?** button to open the *PhotoImpression 2 Online User's Guide*. This provides an index and step-by-step procedures for using your PhotoImpression 2 software to manipulate and enhance your photos.
- You can also get help with any button or feature in the software by moving your mouse cursor over it and clicking the right mouse button. This brings up context-sensitive help that explains the software button or feature.
- Visit our Help site on the Web for more information.

  **www.PolaroidDigitalASIA.com**

# Camera Precautions

- This camera is battery operated. Supervise children when the camera is operated by them or used in their presence. To avoid electrical shock, do not expose the camera to, or immerse it in, any fluids. Do not disassemble or operate the camera if dropped or damaged. Contact a Polaroid Service Center for repair information.
- Do not open the camera case or attempt your own repairs. High-voltage internal components create the risk of electrical shock when exposed. Return your camera to authorized Polaroid service providers for all maintenance and repairs.
- Keep the camera away from all fluids. Moisture creates the danger of fire and electrical shock. Do not use the camera in the rain, at the seashore, or any location where there is the possibility of exposure to fluids.
- Turn the camera off and remove the batteries immediately if the camera is exposed to water or any other fluid.
- Do not open the battery compartment while the camera is on. If the camera loses power while processing a new photo, the photo cannot be stored and may cause corruption of other stored photos.

# Limited Warranties

## One Year Limited Warranty
## Polaroid *FUN* 620 Digital Camera

Polaroid will, at our option, repair or replace any unit found defective in manufacture within the warranty period. The warranty period is determined by the date of purchase. Keep the receipt as proof of purchase. Otherwise, the warranty period is determined by the date of manufacture.

**This warranty does not apply to damage caused by accident, misuse or tampering, and excludes all consequential damages except in jurisdictions not allowing such exclusions or limitations.**

## Ninety Day Limited Warranty — Polaroid PhotoImpression 2 Software

Polaroid warrants that the software media will be free of defects in materials and workmanship for a period of 90 days from the date of purchase. Polaroid Corporation's entire liability and your exclusive remedy shall be to repair or replace the software that does not meet Polaroid Corporation's Limited Warranty and is returned to Polaroid with a copy of your sales receipt. This Limited Warranty is void if failure of the software has resulted from accident, abuse, or misapplication. Any replacement software will be warranted for the remainder of the original warranty period or 30 days, whichever is longer.

**Polaroid makes no other warranties with respect to the software, either express or implied, including but not limited to implied warranties of merchantability and fitness for a particular purpose.**

# Product Compliance

This product conforms to the following EC standards:

## EMC Directive

EMC Directive 89/336/EEC

EN55022, Class B

EN55024

# Contacting Polaroid

Contact Polaroid Corporation at **www.PolaroidDigitalASIA.com** or call the Polaroid Digital Product Support Centre at:

- Australia (local): 1 800 242 643
- Australia: +61 2 9950 7134
- Hong Kong: +852 2894 0371
- Malaysia: +60 3 78778577
- New Zealand: +09 303 1479
- Singapore: +65 7330278
- Taiwan: +886 2 27028123
- Thailand: +66 2 367 1256

Warranty, phone-support, and repair services are regional and may not be available for a particular product outside the country where it was purchased.

Thank you for purchasing this Polaroid Digital Product. For more information on our other imaging products, please visit **www.PolaroidDigital.com**.

© 2001 Polaroid Corporation, Cambridge, MA 02139, U.S.A., owner of the trademarks “Polaroid and Pixel Design” and Max the Bird (and Design) © 1998-2001. All other product names may be the property of their respective owners. All rights reserved. Printed in the Hong Kong.

PA-60117F-0 05/01

# Polaroid *FUN* 620 創意套件

Polaroid *FUN* 620 數位相機創意套件包含所有拍攝數位照片、將照片儲存到電腦上、並加以修飾所需的工具。

**小心：***在將相機連接到電腦前，請先安裝相機（第 26 頁）內附的 PhotoImpression 2 軟體，並重新啓動電腦。*

該套件包括：

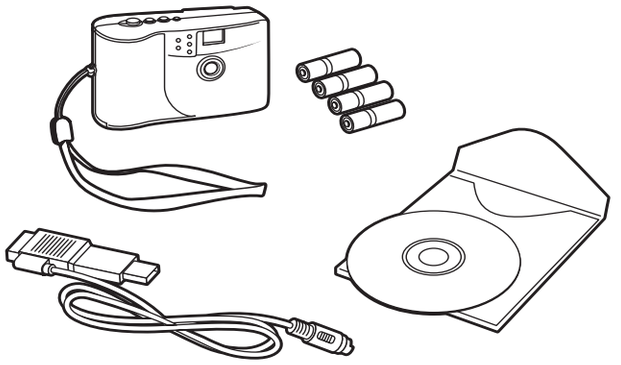

- Polaroid *FUN* 620 數位相機
- 四枚 AAA 電池
- 相機連接電腦的纜線（同時包含 RS-232C 序列埠與 USB 插孔）
- Polaroid PhotoImpression 2 軟體光碟片

**注意：**請確定電腦擁有 RS-232C 序列埠或高速 USB 連接埠（後者僅適用於 Windows 98、Me 或 2000）。

# 相機正面

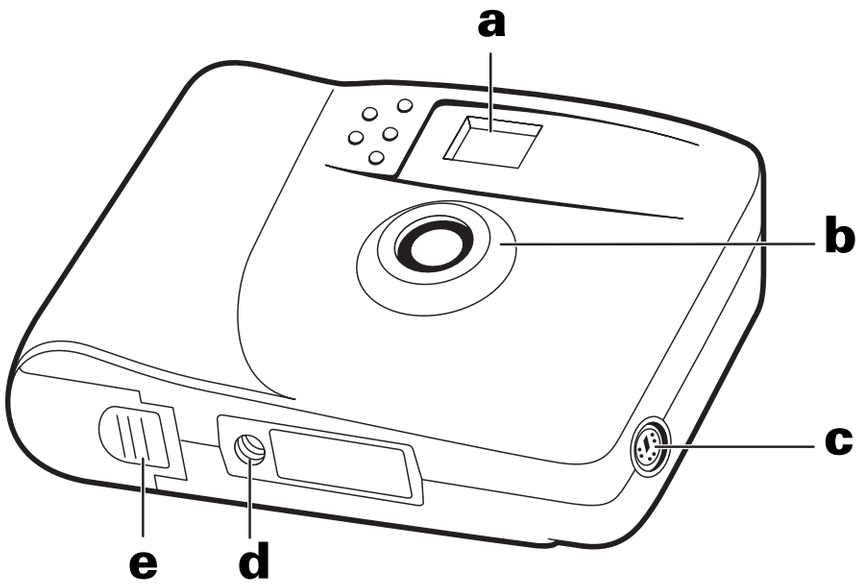


- **a** 觀景窗
- **b** 鏡頭
- **c** 序列/USB 纜線連接埠
- **d** 三腳架固定器
- **e** 電池槽

# 相機背面

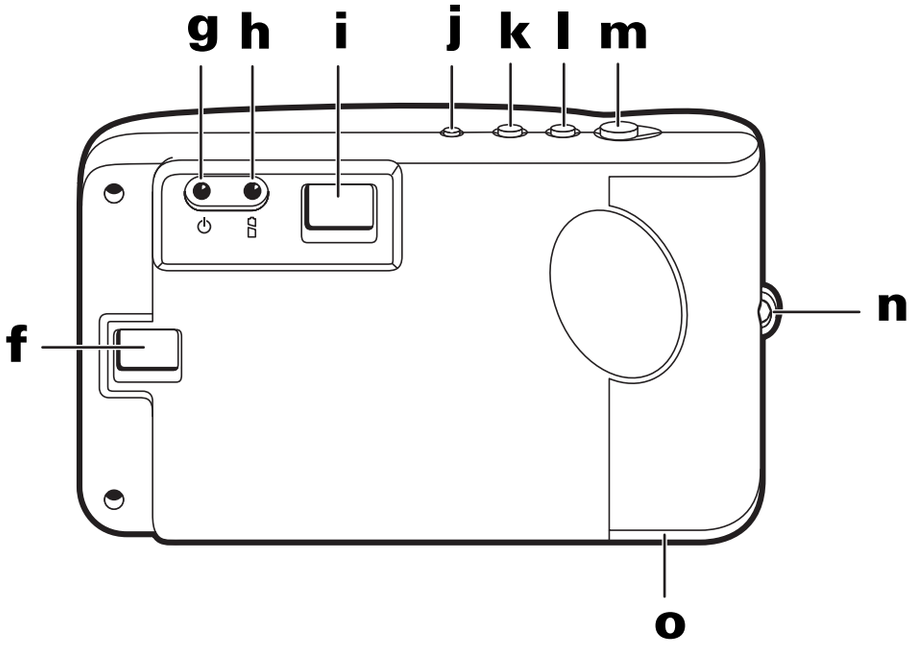


- **f** LCD 狀態顯示器
- **g** 電源/狀態指示器
- **h** 低電量指示器
- **i** 觀景窗
- **j** 電源按鈕
- **k** 照片清除按鈕
- **l** 自拍按鈕
- **m** 快門按鈕
- **n** 背帶槽
- **o** 電池槽

**注意：**要取得更多相機相關資訊，請參閱 *PhotoImpression 2 線上使用者指南*（軟體線上說明）中的**提示**、**技巧**、**詞彙與技術**等相關章節。

# 開啟與關閉相機電源

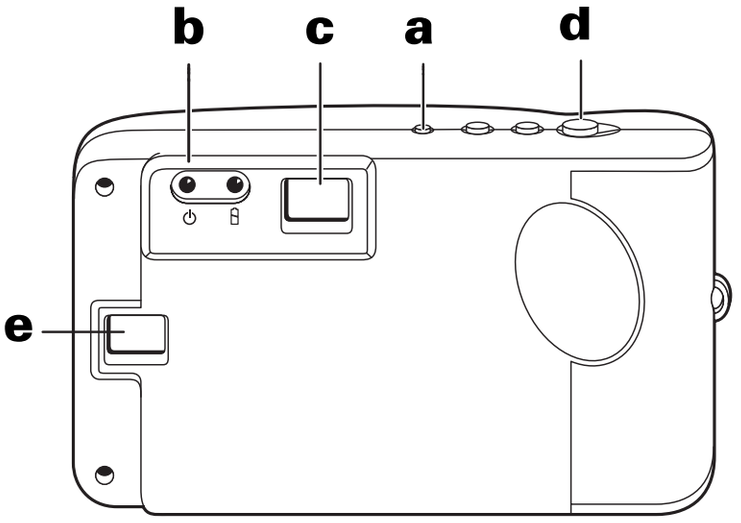


1 開啓相機電源 (**a**)。您會聽到喀嗒一聲，LCD 螢幕 (**e**) 會亮起，且綠色的電源/狀態指示器 (**b**) 會亮起。

如果綠色的電源/狀態指示器沒有亮起，請檢查電池是否已經正確載入並有充足電力。

2 要關閉相機電源，請持續按著電源按鈕 (**a**)，直到電源/狀態指示器 (**b**) 關閉。

**注意：**爲節省電池電力，相機在不被運作達 90 秒鐘後會發出嗶聲並自動關閉。要將它的電源開啓，請按下電源按鈕 (**a**)。LCD 螢幕 (**e**) 會亮起，且綠色的電源/狀態指示器 (**b**) 會亮起。要拍攝照片，請透過觀景窗 (**c**) 爲照片構圖，然後按下快門按鈕 (**d**)。

# 插入電池

您的套件中包含四枚 AAA 電池。

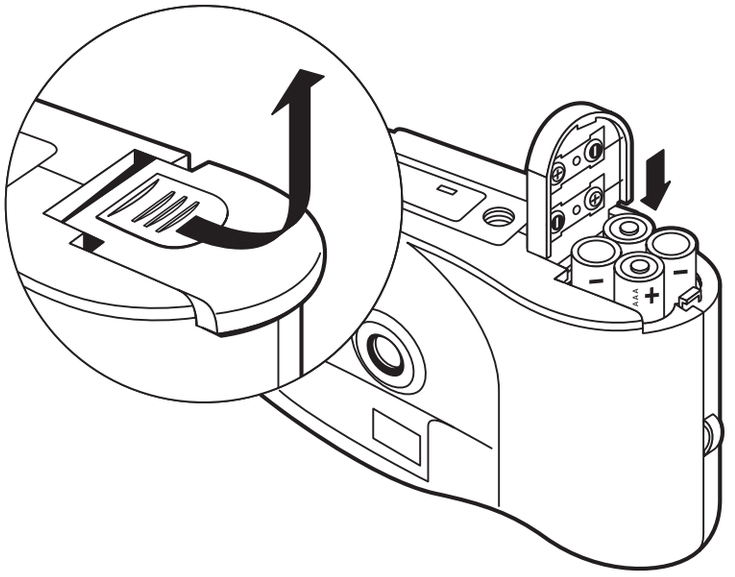

1. 將相機的電源關閉。
2. 開啓電池門：將電池蓋向外滑出，拉到最外面並向上提。
3. 放入電池。確定電池的極性（**+** 與 **-**）已經正確定位（如圖所示）。
4. 安穩的關上電池門。將電池門向外滑出，拉到最外面，向相機機座下壓，然後將它滑回機座，以鎖定電池門。如果無法順利關閉，請不要強迫關上電池門。

**注意：**當相機的低電量指示器 (**a**) 亮起時，LCD 螢幕會顯示 **bL**、或 LCD 螢幕完全沒有畫面。

不要混用新舊電池、不同類型的電池、或是來自不同製造商的電池。高容量鹼性電池可以爲數位相機提供更久的電力。

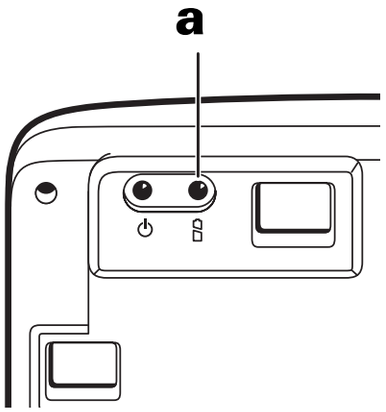

# 拍攝照片

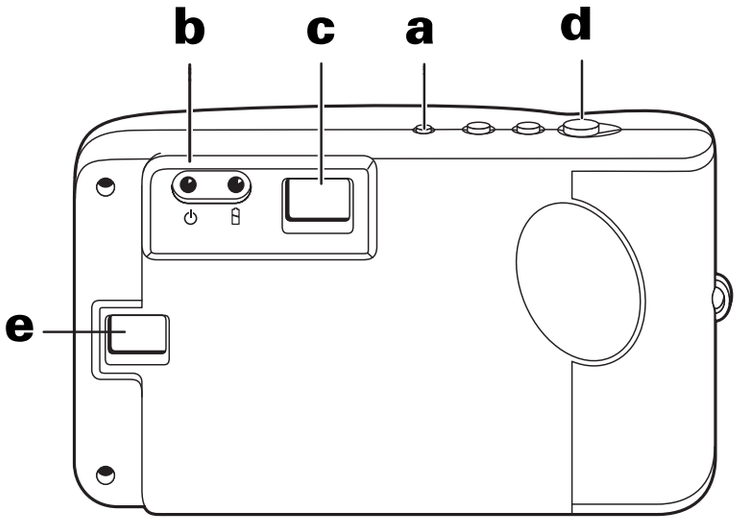


1 開啓相機 (**a**)。綠色電源/狀態指示器 (**b**) 會亮起。

2 請站在照片主題至少 1 公尺（3 英呎）以外。

**注意：**要取得最佳效果，請在室外或照明充分的房間中拍攝照片。

3 將相機指向目標。如果您在 LCD 螢幕 (**e**) 上看到低光源警告訊息 (**LL**)，請增加照明、或移動到更明亮的位置。

如果您依然打算在不增加照明或移動到更明亮位置的情況下拍攝低照明照片，請非常穩定的握住相機、或將相機放在三角架上（使用三角架固定器），因爲所需的曝光時間將會增加。在低光源的狀況下，照片品質可能會受影響。

4 將照片主題放在觀景窗 (**c**) 的黃線中。

5 穩定的握住相機，並按下快門按鈕 (**d**)，直到相機發出嗶聲。（在聽到嗶聲前移動相機，可能會導致照片模糊。）相機處理照片時，電源/狀態指示器會閃爍，且 LCD 螢幕 (**e**) 上的照片計算器會被加一張。

**注意：**當 1 MB 相機記憶體已滿（約 15 張照片）時，LCD 螢幕會顯示記憶體已滿訊息 (**FL**)，且相機會發出三聲快速的警告嗶聲。如果您按下快門按鈕，相機會發出三聲嗶聲，但不會拍攝照片。

**注意：**當記憶體已滿時，請將照片傳輸到電腦（第 27 頁）上，並由相機的記憶體中將照片清除（第 25 頁與第 31 頁）。

# 使用自拍功能

要使用自拍功能，請使用三腳架或將相機放到平坦的表面。

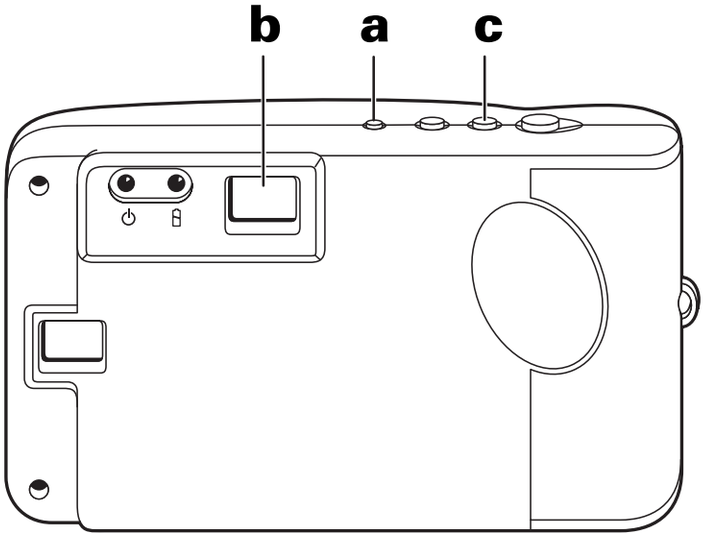


1. 開啓相機電源 (**a**)。
2. 將相機定位以拍攝照片。
3. 透過觀景窗 (**b**) 爲要拍攝的照片構圖。
4. 按下自拍按鈕 (**c**)。相機會發出十五秒鐘的嗶聲，嗶聲速度會越來越快，然後在嗶聲停止時相機將會拍攝照片。

   要取消自拍功能，請按下電源按鈕。

**注意：**當使用自拍功能時，不需要按下快門按鈕。

# 清除相機中的照片

**1** 持續按著清除按鈕 (**a**) 3 秒鐘。最後拍攝的照片將會被清除。

照片被清除後相機將會發出嗶聲，且 LCD (**b**) 上的照片計算器將會被減一張。

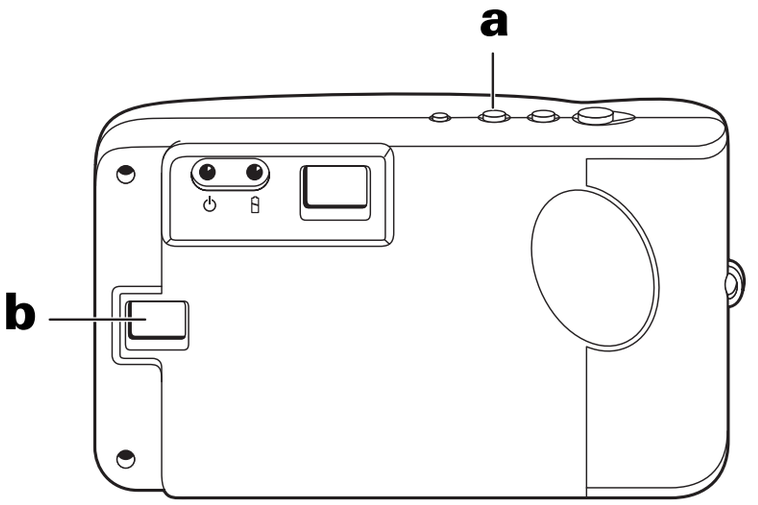


**2** 重覆上述步驟以清除其他照片。

**注意：**您也可以使用 Polaroid PhotoImpression 2 軟體（第 31 頁）來清除照片。

**警告：照片在清除後，將會永遠消失。**

# 安裝 PhotoImpression 2 軟體

1 開啓電腦的電源。

2 請檢查電腦是否符合下列需求：

- 200 MHz Pentium 或等級處理器
- 與 Microsoft Windows 95、98、Me 或 2000 相容
- 32 MB 記憶體，195 MB 可用硬碟空間
- 可用 USB 連接埠（Windows 98、Me 或 2000）或 RS-232 序列埠
- 高彩顯示器，配備 800 × 600 或更高解析度。
- 2 倍速或更快速的光碟機
- 滑鼠

3 將軟體光碟放入個人電腦中。

如果安裝程式無法自動啓動：

**a** 由 Windows **開始**功能表中，選擇**執行**。

**b** 按一下**瀏覽**，選擇光碟機。

**c** 由光碟中選擇 **Setup.exe**。

**d** 按一下**開啟**。

**e** 按一下**確定**。安裝程式會開始動作。

4 請依照電腦螢幕上的說明進行操作。

5 按一下**完成**。

**小心：** *軟體安裝完成後，您必須重新啓動電腦。*

# 由電腦傳輸照片

1 關閉相機電源。

2 關閉電腦與周邊的電源（僅限序列埠傳輸）。

當使用電腦的 USB 連接埠時，不須關閉電源。

3 找出連結纜線。它包含了將相機連接到電腦序列埠與 USB 連接埠的插頭（如圖所示）。

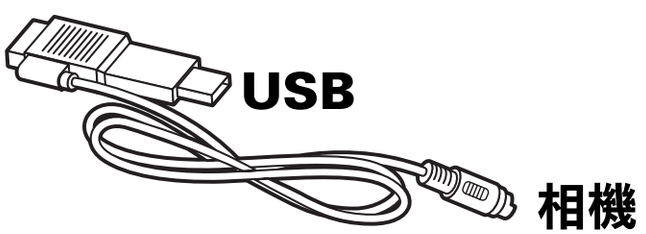


**注意：**USB 傳輸速度比序列埠快。

4 請將序列插頭 (**a**) 或 USB 插頭 (**b**) 插到電腦上。

**小心：***如果 USB 連線不穩固，插頭可能會鬆脫。每次傳送照片前，請檢查插頭是否已經插入。*

**注意：**要取得電腦上序列埠或 USB 連接埠的相關說明，請閱讀電腦的使用手冊、或與電腦製造商聯絡。

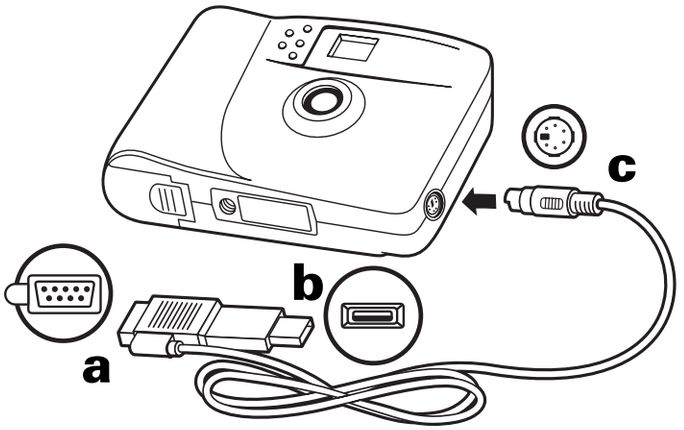


5 請將纜線 (**c**) 的另外一端直接插入相機而不用扭轉（插頭上的箭頭必須面對相機**前方**）。如果無法順利插入，請不要硬將插頭插入。換個方向重試看看。

**6** 開啓電腦電源（僅限序列埠傳輸）。

**7** 連按兩下桌面上的 **PhotoImpression 2** 圖示，開啓 PhotoImpression 2 軟體。**獲取照片**按鈕已經被選定。

**獲取照片**按鈕可以讓您由多個來源抓取照片：

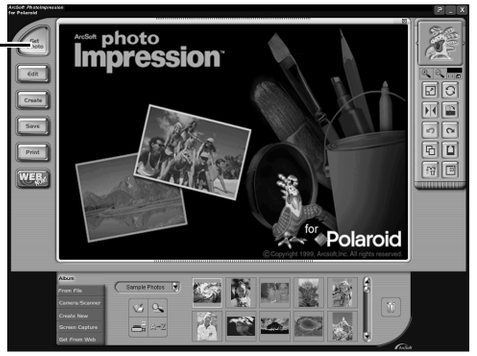


| 選擇： | 用途： |
|---|---|
| 相冊 | 在 PhotoImpression 2 相冊中開啟照片 |
| 來自檔案 | 開啟最近使用的照片、或任何儲存在電腦上的照片 |
| 相機/掃描器 | 由相機、掃描器或其他 TWAIN 相容裝置傳輸照片 |
| 新建 | 建立新影像檔案 |
| 視屏抓取 | 抓取活動中電腦畫面或活動中視窗 |
| 從 Web 獲取 | 由 www.PolaroidDigitalASIA.com 網站上您的相冊中獲取照片 |

**8** 按一下**相機/掃描器**。

**9** 由**選擇來源**清單中，選擇 **Polaroid FUN 620**。

**10** 選擇要在電腦上儲存照片的位置。

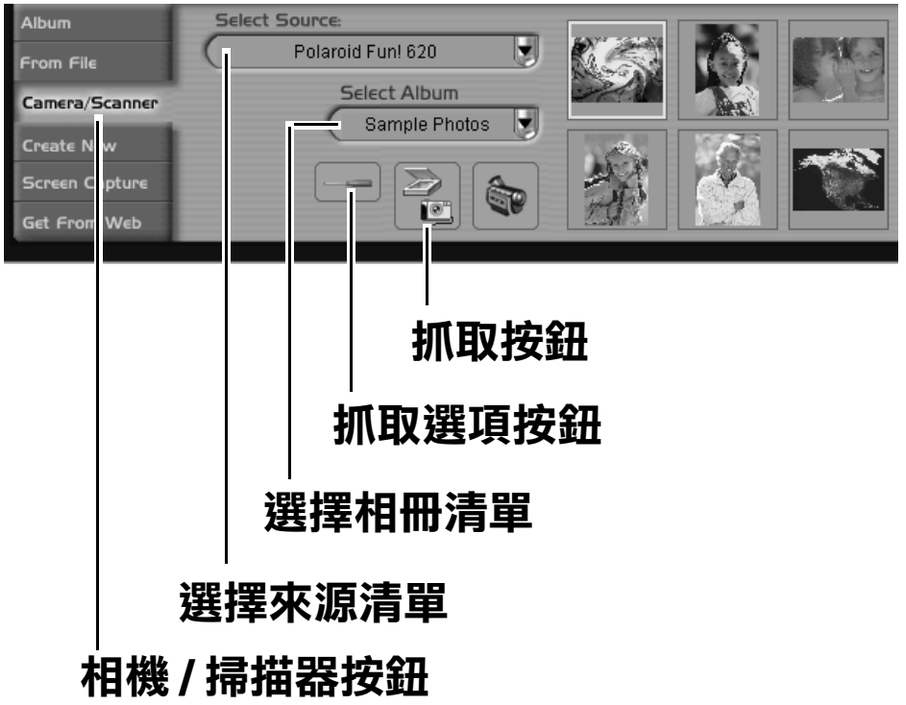


選擇位置的方式有兩種：

- 儲存、顯示與修飾照片的最快速方法，是在**選擇相冊**清單中選擇某個相冊。要建立新相冊，請選擇 **[ 新建 ]** 並使用相冊 **NewAlbum1**、或輸入其他相冊名稱。
  **注意：**照片會出現在活動中的相冊，照片檔案會被儲存到 **c:\My Documents\My Pictures**。這些檔案會使用您下載檔案的日期加以命名。例如：**Mar30$01.JPG**
- 如果您要自訂照片的儲存位置，請按一下**抓取選項**按鈕。

系統會開啓一個 **TWAIN 選項**視窗，您可以在此選擇檔案格式、儲存照片的資料夾、以及照片的檔名。完成後，按一下**確定**。

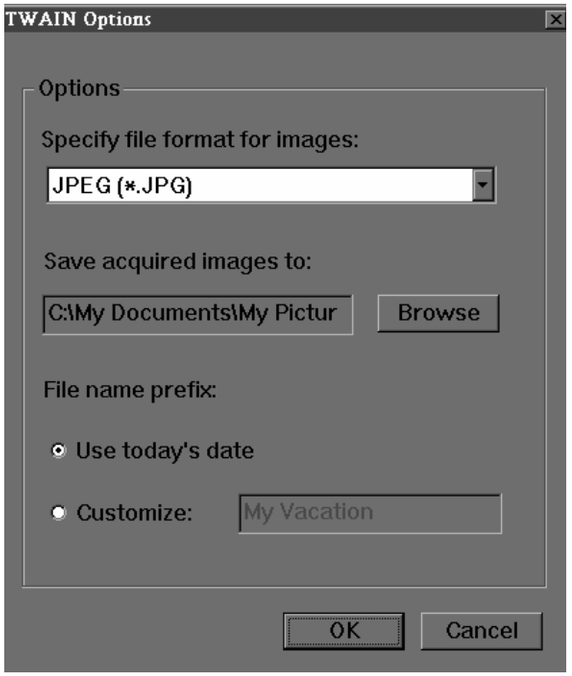


**11** 開啓相機的電源。

**12** 按一下**抓取**按鈕。

TWAIN 軟體會啓動。TWAIN 軟體是用來由相機傳送與刪除照片。

**注意：**如果您看到連線失敗訊息或警告視窗，請將相機電源關閉並重開，檢查相機與電腦間的連線，然後按一下**抓取**。

**13** 如果照片沒有自動出現在 TWAIN 視窗中，請按一下**重新整理縮圖**。

**14** 選擇要傳送到電腦上的照片。

- 要選擇單張照片，請按一下照片縮圖。照片周圍會出現紅色邊框。
- 要選擇多張照片，請按著鍵盤上的 **Control** (**Ctrl**) 鍵，然後按一下各張要選擇的照片縮圖。縮圖會顯示紅色邊框。
- 要選擇全部照片，請按一下**選擇全部**。相機中所有照片縮圖周圍都會顯示紅色邊框。

**15** 按一下**獲取照片**。

**小心：** *要避免照片遺失，請將它們複製到可攜式媒體如：軟碟片、Zip 磁碟、或可燒錄光碟。*

**16** 要使用**選擇相冊**清單（如步驟 10）開啓已儲存的照片，請連按兩下顯示在畫面中相冊裡的縮圖影像。照片會顯示在影像盤中。

要使用 **TWAIN 選項**視窗開啓已儲存照片（如步驟 10），請使用**獲取照片**、**來自檔案**與**瀏覽**按鈕以找出照片，並將它顯示到影像盤中。

現在您可以使用 PhotoImpression 2 工具修飾影像。

**注意：** 要由相機中清除所有照片，請按一下**刪除所有照片**。照片在刪除後將永遠失去。

# 使用 PhotoImpression 2 軟體取得說明

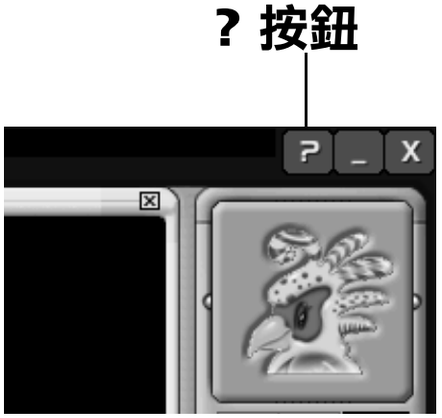


- 選擇 **?** 按鈕已開啓 *PhotoImpression 2 線上使用者指南*。這可以提供使用 PhotoImpression 2 軟體修飾與強化照片的功能索引與逐步操作程序。
- 要取得軟體中按鈕與功能的說明，請將滑鼠游標移動到該按鈕或功能上，然後按一下滑鼠右鍵。系統會顯示內容相關說明，以解釋各種軟體按鈕或功能的作用。
- 請造訪我們的說明網站，以取得更多資訊。

  **www.PolaroidDigitalASIA.com**

# 相機警告

- 本相機使用電池的電力運作。當相機由兒童使用、或在有兒童的場合使用時，請給予兒童適當的指導。爲避免電擊的危險，請不要將相機暴露於液體下、或浸入液體中。不要嘗試拆解相機、或在相機摔落或受損的情況下加以使用。請與 Polaroid 服務中心聯繫，以取得維修資訊。
- 不要開啓相機機蓋、或嘗試自行進行維修。高電壓內部元件在暴露時可能會導致電擊。如果需要任何維修，請將相機送回 Polaroid 授權的服務供應商。
- 請保持相機遠離所有液體。濕氣可能會導致火災或電擊。不要在雨中、海岸或任何可能暴露在液體的地點使用本相機。
- 如果相機暴露在水或其他液體之下，立即將相機電源關閉並取出電池。
- 不要在相機電源開啓時，打開電池槽。如果相機在處理新照片時斷電，照片將無法儲存，並可以會導致已儲存照片的損毀。

# 有限保養

## 一年有限保養

**Polaroid *FUN* 620 數位相機**

Polaroid 將依照自身的選擇，修理或替換在保養期內發生製造損壞的機器。保養期將以購買日爲基準計算。請保留收據，以作爲購買憑證。否則，保養期將以製造日期爲基準計算。

**除當地司法管轄權不允許該等除外或限制，本保養不適用於因意外、錯誤使用、修改而導致的損害，並排除所有繼發性損害。**

## 九十天有限保養　　Polaroid PhotoImpression 2 軟體

Polaroid 保證，在購買 90 天內，本軟體媒體將可免於材料或製造缺陷。Polaroid Corporation 的完整責任、以及您的唯一補償，是修復或置換不符合 Polaroid Corporation 有限責任保養、且隨購買收據副本退回 Polaroid 的軟體。如果本軟體的故障導因於意外、誤用或濫用，本「有限保養」將無效。所有置換軟體的保養期將延續原始保養期或 30 天，以時間較長者爲準。

**對於本軟體，Polaroid 將不負任何明示或暗示的保養責任，包括但不限於適銷性與特定用途適用性的隱含保養。**

# 產品相符性

本產品符合下列 EC 標準：

## EMC Directive

EMC Directive 89/336/EEC

EN55022, Class B

EN55024

*中文*

# 聯絡 Polaroid

要與 Polaroid Corporation 聯繫，請造訪我們的網站，網址是：**www.PolaroidDigitalASIA.com**、或撥打 Polaroid 數位產品支援中心的電話：

- 台灣：+886 2 27028123
- 香港：+852 2894 0371
- 泰國：+66 2 367 1256
- 紐西蘭：+09 303 1479
- 馬來西亞：+60 3 78778577
- 新加坡：+65 7330278
- 澳大利亞（當地）：1 800 242 643
- 澳大利亞：+61 2 9950 7134

保養、電話支援與維修服務只在當地提供，特定產品在購買國以外可能無法提供服務。

感謝您購買本 Polaroid 數位產品。要取得我們其他影像產品的相關資訊，請造訪 **www.PolaroidDigital.com**。

© 2001 年 Polaroid Corporation, Cambridge, MA 02139, U.S.A.。該公司也是「Polaroid and Pixel Design」與 Max the Bird（及相關設計）商標的擁有者，© 1998-2001 年。所有產品名稱都是各自擁有者的財產。所有權利均予保留。在香港列印。

PA-60117F-0 05/01